

## drum-tec Trigger Settings: Roland TD

drum-tec Trigger Settings TD-4/TD-9													
					BASIC			ADVANCED					
	Pad Type	Sens	Threshold	Curve	XTalk	Mount	ScanTime	Retr.Canc	MaskTime	RimGain	RimAdjust	XStick	
drum-tec Pro Snare	PD-125	5	2	Linear	OFF		2	4	6	2,2	3	100	
drum-tec Pro Kick	KD-120	8	5	Linear	OFF		2	10	10				
drum-tec Pro Tom 8/10	PD-125	5	2	Linear	30		2	4	6	2,2	2,2		
drum-tec Pro Tom 12	PD-125	5	2	Linear	30		2	4	6	2,2	2,2		
drum-tec Pro Tom 14/16	PD-125	5	2	Linear	30		2	4	6	2,2	2,2		
drum-tec diabololo 8/10 Pad	PD-105	5	2	Linear	30		2	4	6	2,2	2,5	100	
drum-tec diabololo 12 Pad	PD-125	5	2	Linear	30		2	4	6	2,5	3	100	
drum-tec diabololo 13" FloorTom	PD-125	5	2	Linear	30		2	4	6	2,5	3	100	
drum-tec diabololo 13" Snare/Tom	PD-125	5	2	Linear	30		2	4	6	2,5	3	100	
drum-tec diabololo Kick +Real Feel	KD-120	8	5	Linear	OFF		2	10	10				
drum-tec diabololo FX Pad 6" x 5"	PDX-8	6,5	2	Linear	30		2	9	4				
drum-tec Jam 12" Snare	PDX-8	7	2	Linear	OFF		2	4	6	2,5	3	100	
drum-tec Jam 10" Tom	PDX-8	7	2	Linear	30		2	4	6	2,5	3		
drum-tec Jam 12" FloorTom	PDX-8	7	2	Linear	OFF		2	4	6	2,5	3		
drum-tec Jam 18" Kick	KD-120	12	5	Linear	OFF		2,8	10	10				
drum-tec Trigger Tube	KD-7	32		Loud2			2	4	6				
drum-tec Trigger Tube Pro	KD-7	20		Linear			2	4	6				
drum-tec Trigger Settings TD-12/TD-20													
					BASIC			ADVANCED					
	Pad Type	Sens	Threshold	Curve	XTalk	Mount	ScanTime	Retr.Canc	MaskTime	RimGain	RimAdjust	XStick	
drum-tec Pro Snare	PD-125	5	2	Linear	OFF	Separat	2	4	6	2,2	3	126	
drum-tec Pro Kick	KD-120	8	5	EXP2	OFF	Separat	2	10	10				
drum-tec Pro Tom 8/10	PD-125	5	2	Linear	30	Pad	2	4	6	2,2	2,2		
drum-tec Pro Tom 12	PD-125	5	2	Linear	30	Pad	2	4	6	2,2	2,2		
drum-tec Pro Tom 14/16	PD-125	5	2	Linear	30	Pad	2	4	6	2,2	2,2		
drum-tec diabololo 8/10 Pad	PD-105	5	2	Linear	30	Pad	2	4	6	2,2	2,5	100	
drum-tec diabololo 12 Pad	PD-125	5	2	Linear	30	Pad	2	4	6	2,5	3	100	
drum-tec diabololo 13" FloorTom	PD-125	5	2	Linear	30	Pad	2	4	6	2,5	3	100	
drum-tec diabololo 13" Snare/Tom	PD-125	5	2	Linear	30	Pad	2	4	6	2,5	3	100	
drum-tec diabololo Kick Real Feel	KD-120	8	5	EXP2	OFF	Separat	2,8	10	10				
drum-tec diabololo FX Pad 6" x 5"	PDX-8	6,5	2	Linear	30	Pad	2	9	4				

drum-tec Jam 12" Snare	PD-105	7	2	Linear	OFF	Separat		2	4	6	2,2	3	80
drum-tec Jam 10" Tom	PD-105	7	2	Linear	30	Pad		2	4	6	3	2,5	
drum-tec Jam 12" FloorTom	PD-125	7	2	Linear	30	Pad		2	4	6	2,2	3	
drum-tec Jam 18" Kick	KD-120	12	5	Linear	OFF	Separat		2,8	10	10			
drum-tec Trigger Tube	KD-7	32		Loud2	30	Pad		2	4	6			
drum-tec Trigger Tube Pro	KD-7	20		Linear		Pad		2	4	6			
<b>drum-tec Trigger Settings TD-11/TD-15</b>				<b>BASIC</b>				<b>ADVANCED</b>					
		Pad Type	Sens	Threshold	Curve	XTalk		ScanTime	Retr.Canc	MaskTime	RimGain	RimAdjust	XStick
drum-tec Pro Snare	PD-128	5	2	Linear				2	4	9	1	20	5
drum-tec Pro Kick	KD-120	8	5	Linear				2,8	10	10			
drum-tec Pro Tom 8/10	PD-125	5	2	Linear	30			2	4	9	1,5	20	
drum-tec Pro Tom 12	PD-125	5	2	Linear	30			2	4	9	1,5	20	
drum-tec Pro Tom 14/16	PD-125	5	2	Linear	30			2	4	9	1,5	20	
drum-tec diabololo 8/10 Pad	PD-105	5	2	Linear	30			2	4	9	1,5	20	6
drum-tec diabololo 12 Pad	PD-125	5	2	Linear	30			2	4	9	1,5	20	6
drum-tec diabololo 13" FloorTom	PD-125	5	2	Linear	30			2	4	9	1,5	20	6
drum-tec diabololo 13" Snare/Tom	PD-128	5	2	Linear	30			2	4	9	1,5	20	4
drum-tec diabololo Kick +Real Feel	KD-120	10	5	Linear				2,8	10	10			
drum-tec diabololo FX Pad 6" x 5"	PDX-8	6,5	2	Linear	30			2	9	4			
drum-tec Jam 12" Snare	PDX-8	7	2	Linear				2	4	9	2,5	20	
drum-tec Jam 10" Tom	PDX-8	7	2	Linear	30			2	4	9	2	20	
drum-tec Jam 12" FloorTom	PDX-8	7	2	Linear	30			2	4	9	2	20	
drum-tec Jam 18" Kick	KD-120	12	5	Linear	OFF			2,8	5	10			
drum-tec Trigger Tube	KD-7	32		Loud2	30			2	1	9			
drum-tec Trigger Tube Pro	KD-7	20		Linear				2	4	6			
<b>drum-tec Trigger Settings TD-17/TD-25/TD-30</b>				<b>BASIC</b>				<b>ADVANCED</b>					
		Pad Type	Sens	RimGain	Thresh	Curve	XTalk	ScanTime	MaskTime	Retr.Canc	RimAdjust	XStick	
drum-tec Pro Snare	PD-128	5		1,3	2	Linear		2	9	4	15	100	
drum-tec Pro Kick	KD-120	8			5	EXP2		2,8	10	10			
drum-tec Pro Tom 8/10	PD-125	5		1,5	2	Linear	30	2	9	4	20		
drum-tec Pro Tom 12	PD-125	5		1,5	2	Linear	30	2	9	4	20		



drum-tec Trigger Settings TD-27 / TD-50X					BASIC					ADVANCED				
	Pad Type	Sens	RimGain	Global Sens	Thresh	Curve	XTalk		ScanTime	MaskTime	Retr.Cand	RimAdjust	XStick	
drum-tec Pro Snare	PD-128	4	1,1	normal	2	LOG1			2	9	2	20	80	
drum-tec Pro Kick	KD-120	6		normal	5	Linear			2,8	10	8			
drum-tec Pro Tom 8/10	PDA-120	2	1,4	normal	2	LOG2	30		2,8	9	8	15		
drum-tec Pro Tom 12	PDA-120	2,5	1,4	normal	2	LOG2	30		2,8	9	8	15		
drum-tec Pro Tom 14/16	PDA-140F	2,5	1,2	normal	2	LOG2	30		2,8	9	8	15		
drum-tec diabololo 8/10 Pad	PDA-120	3	1,1	normal	2	LOG1	35		2,8	9	8	16		
drum-tec diabololo 12 Pad	PDA-120	3	1,1	normal	2	LOG1	30		2	9	8	16		
drum-tec diabololo 13" FloorTom	PDA-140F	4	0,8	normal	2	Linear	35		2,8	9	4	14		
drum-tec diabololo 13" Snare/Tom	PD-128	7	1,4	normal		Linear	10		2	9	1	23	80	
drum-tec diabololo Kick Real Feel	KD-120	6		normal	5	Linear	10		2,8	10	8			
drum-tec diabololo FX Pad 6" x 5"	PDX-8	6,5		normal	2	Linear	30		2	9	4			
drum-tec Jam 12" Snare	PDX-8	3,5	2,5	normal	2	EXP2			2	9	4	20	100	
drum-tec Jam 10" Tom	PDX-8	3,5	2	normal	2	Linear	30		2	9	4	20		
drum-tec Jam 12" FloorTom	PDX-8	3,5	2	normal	2	Linear	30		2	9	4	20		
drum-tec Jam 18" Kick	KD-120	12		normal	5	Linear			2,8	10	10			
drum-tec Trigger Tube	KD-7	32		normal		Loud2	30		2	9	4			
drum-tec Trigger Tube Pro	KD-7	20		normal	2	Linear	30		2	4	6			